

X
MATCHLESS
CANDLE^{CO}

MATCHLESSCANDLECO.COM

Matchless Candle Co. Limited Warranty.

This product is guaranteed to be free from defects in material and workmanship for 180 days following date of purchase. Damage caused by neglect, misuse, exposure to excessive heat/cold/moisture or improper battery installation is NOT covered by this warranty. Proof of purchase (sales receipt) is required. We're always ready to listen! We're really easy to reach by email. Shoot us a message for the fastest response at customerservice@matchlesscandleco.com. Questions or feedback? Please contact customer service at 1.844.628.2453.

Patents: www.MatchlessCandleCo.com/Patents

remote control

LED Candle

With Gratitude for your purchase of Matchless Candle Co.

Our candles are made by hand with high quality design & carefully blended fragrances.

No Match, No Mess, No Worry.



OPERATION

To use remote: point towards candle and press ON. To turn off, press OFF.

Remote will work within a 30ft range.

TIMER SETTINGS

The candle has four separate timer modes to choose from: 4hr, 6hr, 8hr or 10hr.

To activate the desired timer setting while candle is ON press button of your desired timer setting 4, 6, 8, 10 and hold for approximately one second. The LED will blink 1x for 4hr, 2x's for 6hr, 3x's for 8hr, and 4x's for 10 hr. Once complete, candle will automatically turn on at the set time every day and turn off after the selected number of hours.

Flicker OR STATIC


To choose flicker or statight light mode: while can is ON press either flicker or static button on the remote. Flicker is the default setting. Static is continuous light with no flame movement. Static mode conserves battery.

FAST OR SLOW

To choose flame movement sped: While candle is on press either fastor slow button. Fast is the default setting.

DIMMER CONTROL

The pillar has five brightness settings to choose from (the default setting is level 4). To dim your candle in either flicker or static mode, point remote at the pillar and press button to dim candle one level. To adjust pillar to a brighter setting use the lower button.

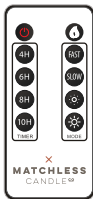

BATTERY SAFETY AND DISPOSAL

- Use CR2025 Battery (included).
- Recycle or dispose of used batteries responsibly, and according to federal, state, and local laws.
- Insert battery using correct polarity (+ and -). Do not short-circuit the supply terminal.
- Failure to insert battery correctly may shorten the life of the battery or cause battery to leak.
- Remove battery from product when not in use and before extended storage.
- Always use and replace battery under adult supervision.

BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN. Swallowing may lead to serious injury or death in as little as 2 hours due to chemical burns and potential perforation of the esophagus. **Immediately see doctor; have doctor phone (202) 625-3333.** Dispose of used batteries immediately. Risk of injury due to fire, explosion or leakage. Do not disassemble, charge, crush or expose to fire or high temperatures.



*Candle battery may decrease using remote control feature depending on brightness settings.